


SOUND DRIVE

MULTIPLE AMPLIFIER

SM-150

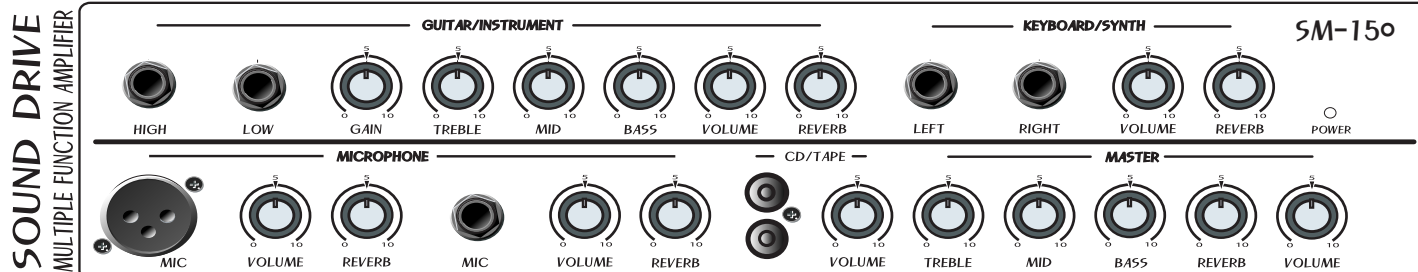

GUITAR / INSTRUMENT

HIGH	Guitar or Bass instrument input jack for Low signal level out.
LOW	Low input level for High signal level out
GAIN	Input pre gain control
TREBLE	Adjust the high frequency output level control at 10KHz 15dB
MID	Adjust the mid frequency output level control at 1KHz 15dB.
BASS	Adjust the low frequency output level control at 100Hz 15dB
VOLUME	Post pre volume control
REVERB	Adjust the amount of spring reverb effect level with control

KEYBOARD / SYNTH

LEFT	Keyboard or synthesizer left input jack
RIGHT	Keyboard or synthesizer right input jack
VOLUME	Post of preamp input level control
REVERB	Adjust the amount of reverb effect level with control

MICROPHONE

MIC	Mic XLR input jack(Balance type)
VOLUME	Mic channel input level control
REVERB	Adjust the amount of reverb effect level with control
MIC	Mic 1/4 input jack(unbalance type)
VOLUME	Mic channel input level control
REVERB	Adjust the amount of reverb effect level with control

CD/AUX

CD/AUX	CD or Tape input jack
VOLUME	Level control for CD and AUX input

MASTER

TREBLE	Adjust the high frequency output level control (Active Equalizer)
MID	Adjust the mid frequency output level control (Active Equalizer)
BASS	Adjust the low frequency output level control (Active Equalizer)
VOLUME	Master volume control
REVERB	Reverb master volume control